

ZC CONTROLLER SCHEMATIC

June 2004

ATTENTION!: Read this section before connecting or using


WARNING!

If you use ZC CONTROLLER without connections to ZX1 or ZX2 you must connect G1 and G2 by a jumper otherwise it does not work.

This for connecting GND logic parallel port to GND power.

NOTE:

Read for scheme application of connection ZC CONTROLLER, exZX1.2 exZX2.2 and exZX2.4

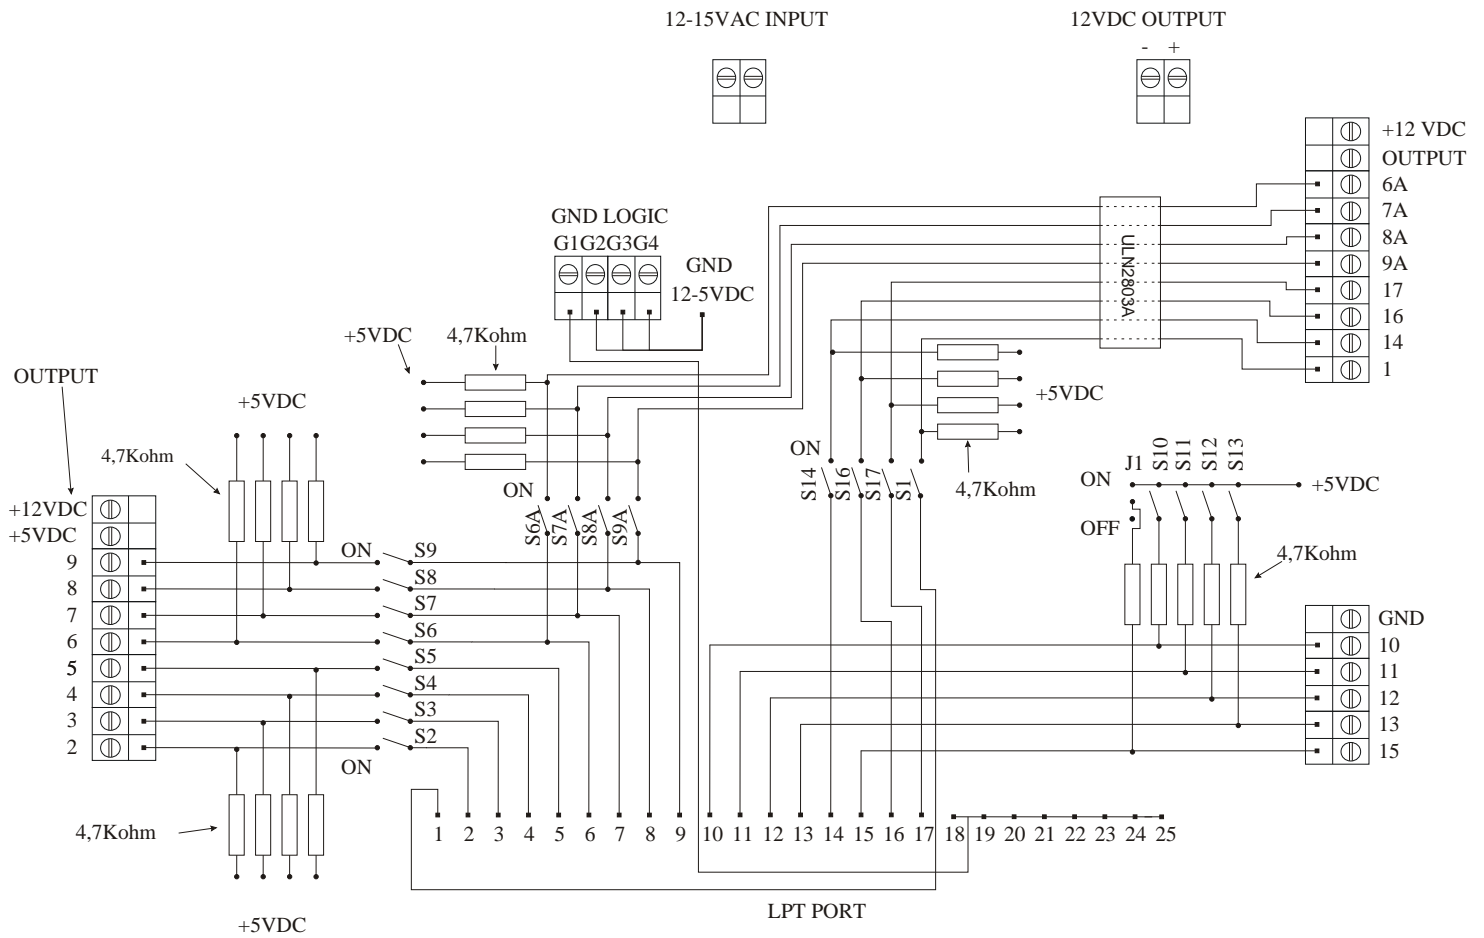

EXCEEDING MAXIMUN RATINGS WILL CAUSE FAILURE!

All Products are tested and conformed to the environmental specifications. Zabyx does not assume responsibility for damages to people or things owing to improper or inadeguate handling by customer, improper or inadeguate customer wiring, unauthorized modification or misuse, or operation outside of the electrical and/or environmental specifications for the Product. Zabyx reserves the right to make changes without further notice to improve reliability, function or design.