



# SCHEMATIC CONTROLLER CONNECTION FOR 4 ZX2 WITH EXTERNAL +5VDC

exZX2.4

June 2004

**ATTENTION!:** Read this section before connecting or using

**NOTE:** Read for scheme of connection application ZX2 STEPPER MOTOR DRIVE exZX2.1, exZX2.2 and exZX2.3

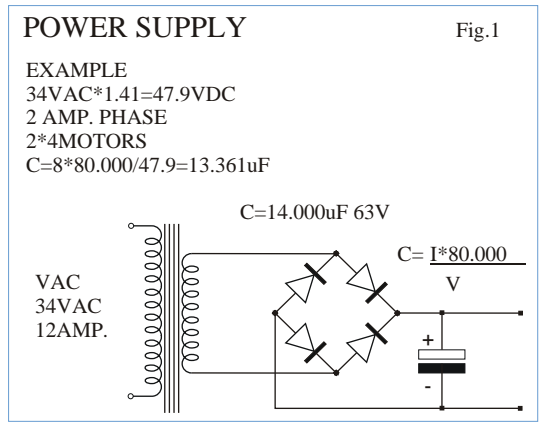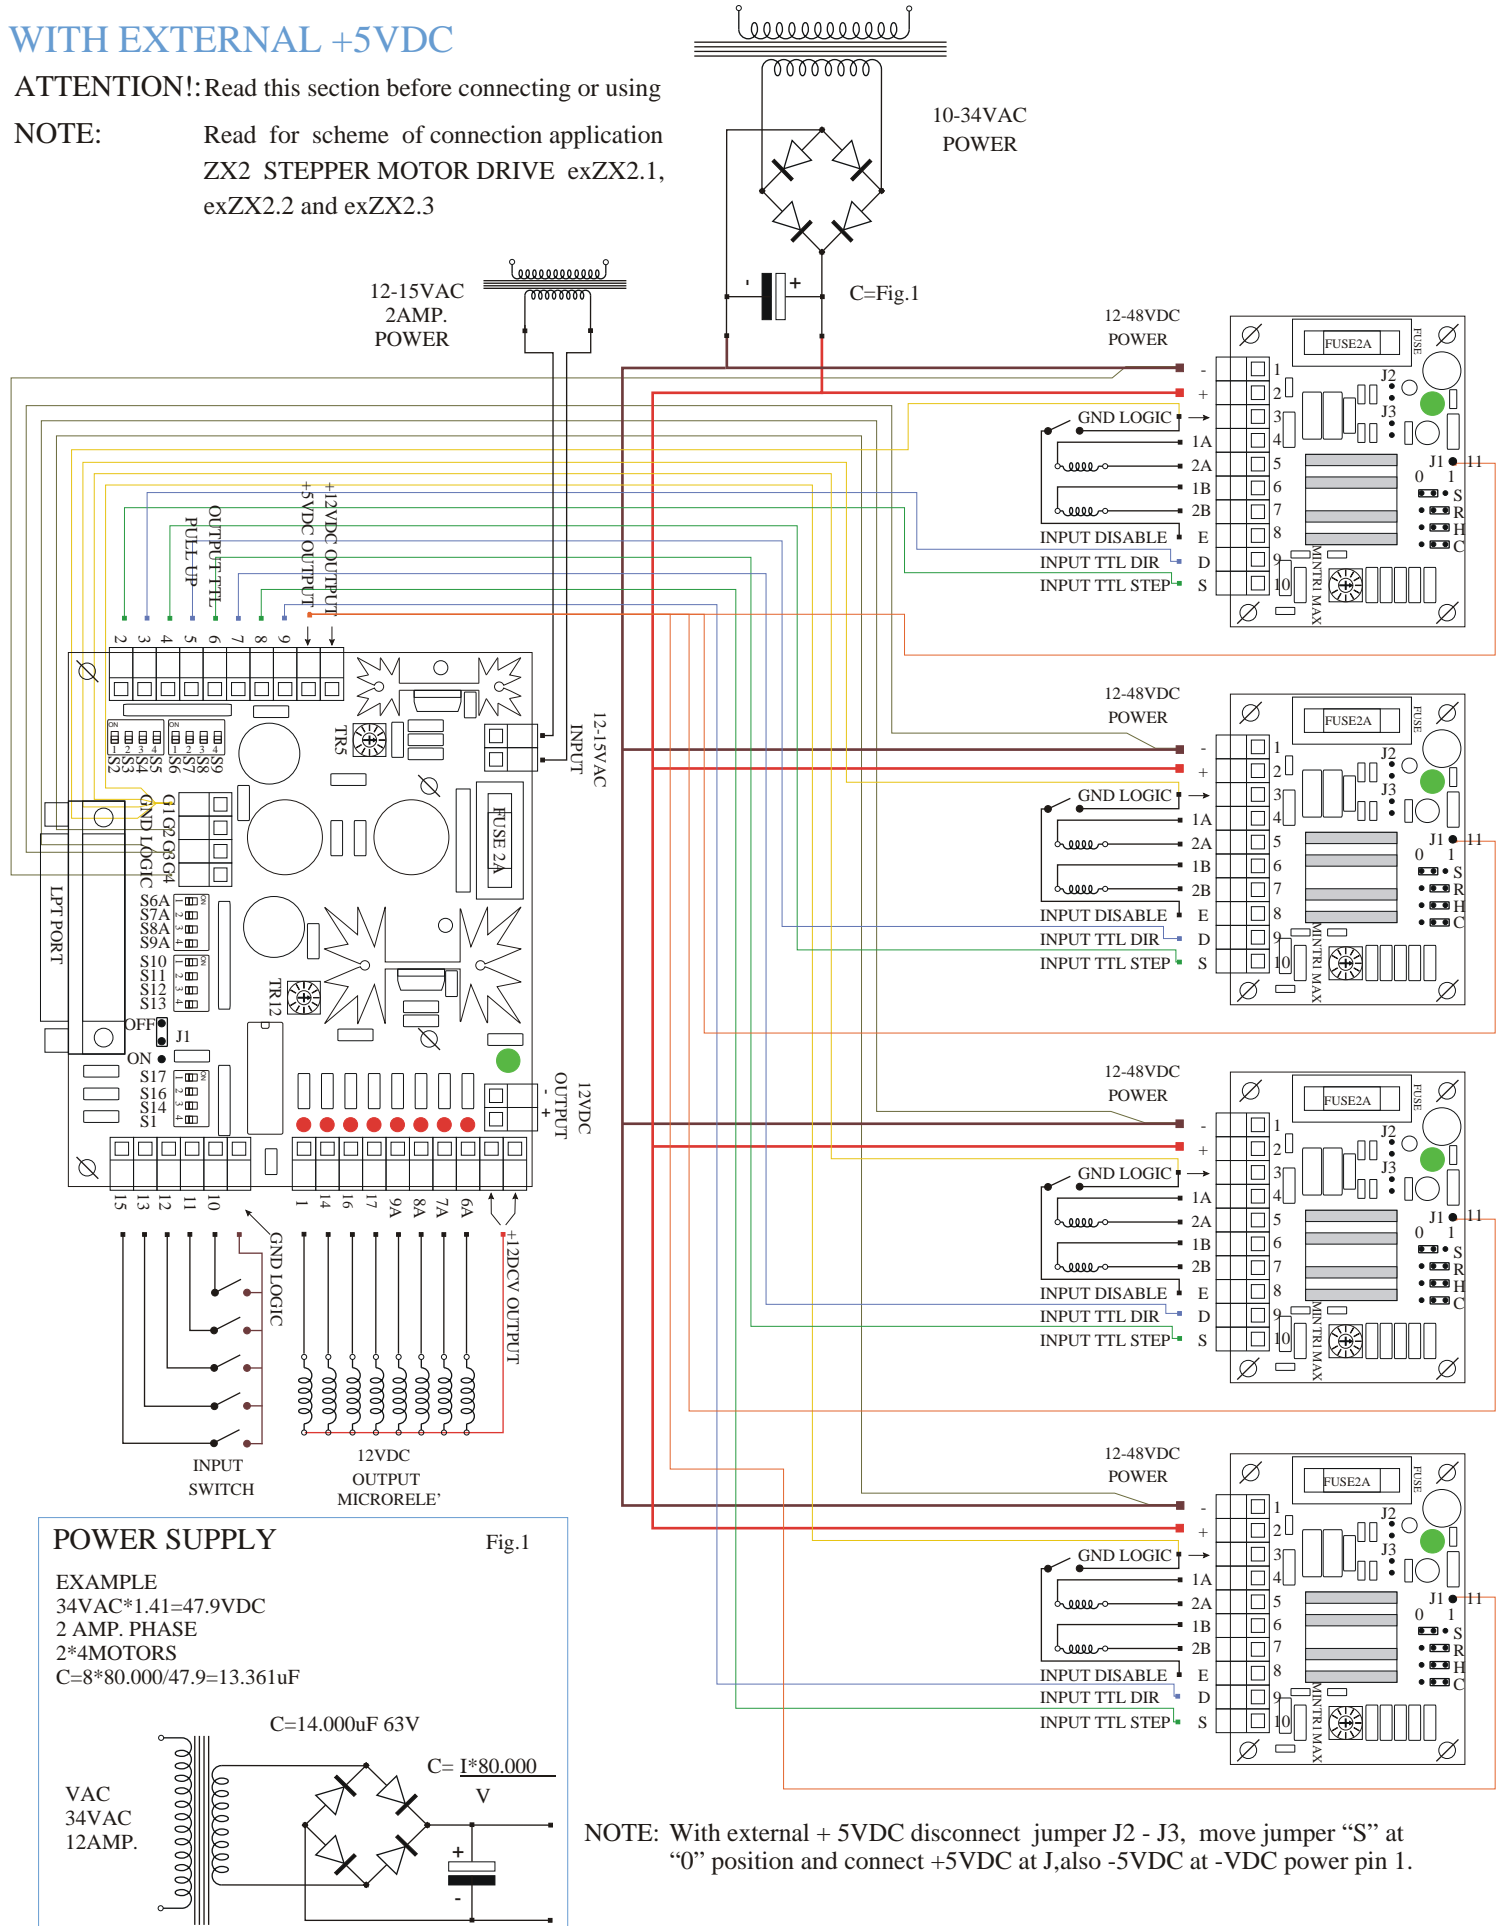

NOTE: With external + 5VDC disconnect jumper J2 - J3, move jumper "S" at "0" position and connect +5VDC at J, also -5VDC at -VDC power pin 1.

**EXCEEDING MAXIMUM RATINGS WILL CAUSE FAILURE!**

All Products are tested and conformed to the environmental specifications. Zabyx does not assume responsibility for damages to people or things owing to improper or inadequate handling by customer, improper or inadequate customer wiring, unauthorized modification or misuse, or operation outside of the electrical and/or environmental specifications for the Product. Zabyx reserves the right to make changes without further notice to improve reliability, function or design.